


Unable to Time Ignition to Engine

Tail # _____

Name _____

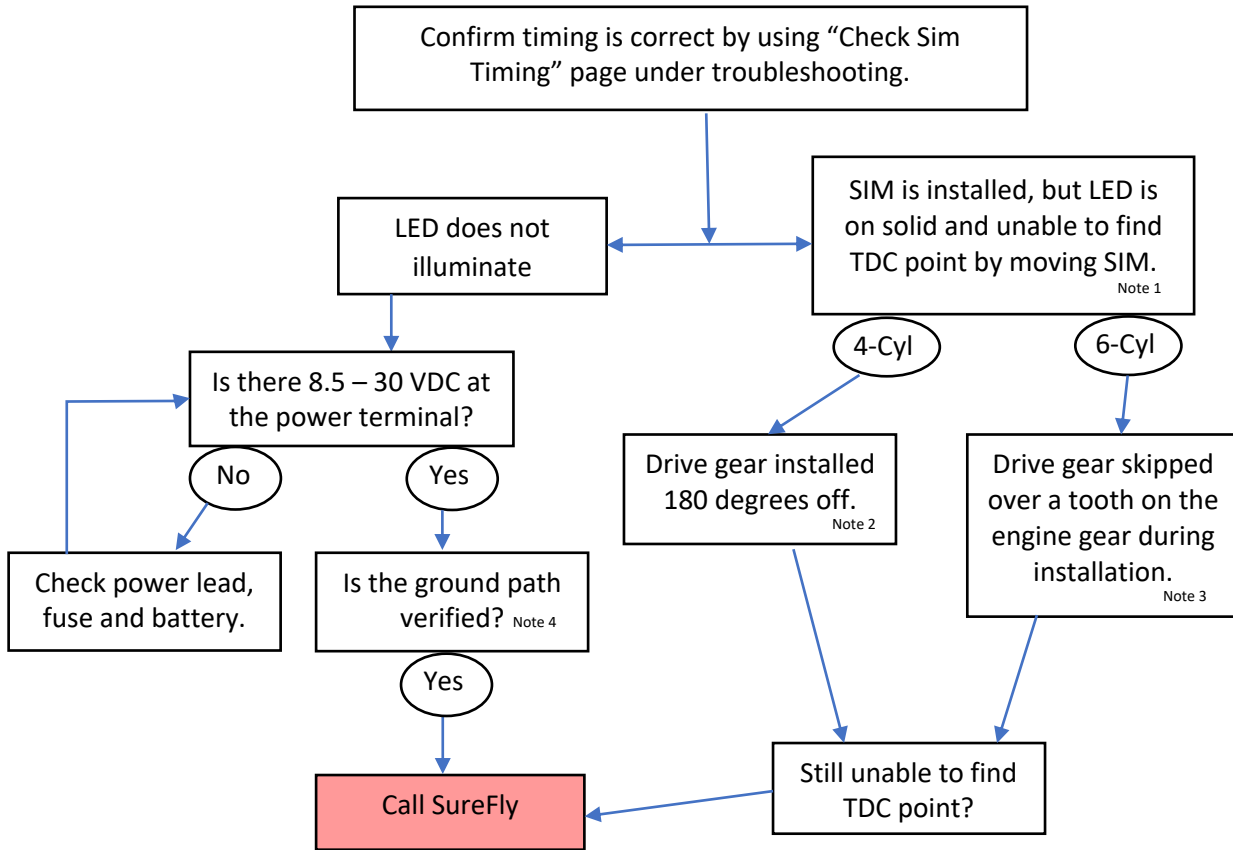

Note 1: Turn shaft SLOWLY, as the LED extinguishes only in a ½ degree window.

Note 2 See installation manual. Remove timing gear, rotate 180 degrees and re-install. (This presumes your gear has two keyways.) If unable, call SureFly.

Note 3: Remove the SureFly, turn the drive gear until the LED extinguishes (a 9-volt battery is ideal here), then reinstall the SureFly.

Note 4: Check that the SureFly is grounded to the engine – occasionally paint or gaskets will interrupt the ground path. Also check the engine to airframe and airframe to battery connections for corrosion and security.